


Original		Rechange		Original		Rechange	
	Power		Power		Tv/Radio		TV/R
	Mute		Mute		Nicam		3D
	Source		AV		PC.A/Zoom		Shift + Eject
	1		1		Display		Info
	2		2		Sleep		Sleep
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		OK		Ok
	8		8		CH+		Ch +
	9		9		CH-		Ch -
	0		0		Menu		Menu
	-/--		Guide		Exit		Exit
	Recall		Back		Vol+		Vol +
	P.Mode		Shift + Format		Vol-		Vol -
	S.Mode		Shift + Dual		Play		Play

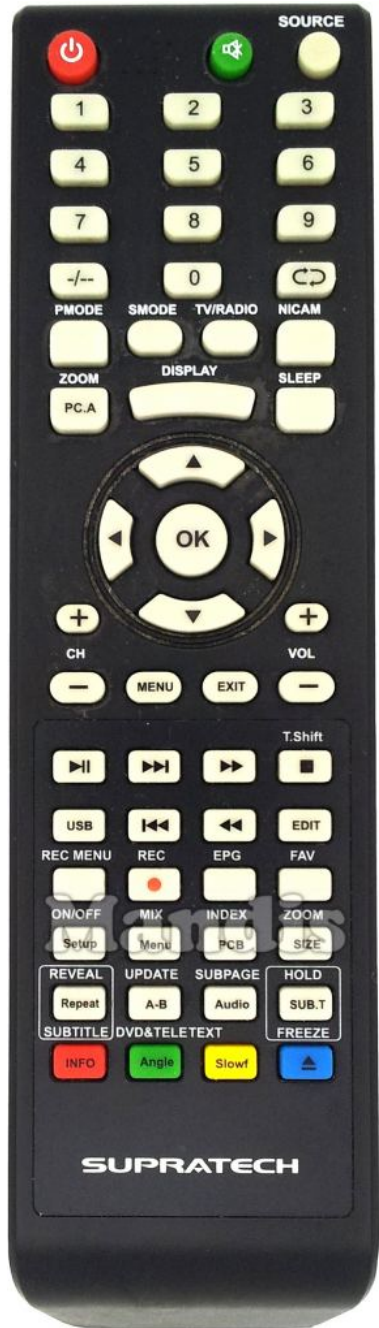



Original	Rechange
Pause	Pause
>>I	>>I
I<<	I<<
>>	>>
<<	<<
Open/Close	Eject
Stop/T.Shift	Stop
USB	Smart
Edit	Shift + Smart
Rec Menu	Shift + Rec
Rec	Rec
EPG	Shift + Guide
FAV	Pre Ch
Setup/On/Off	Options
Menu/Mix	D. Menu
PCB/Index	List
Size/Zoom	Format

Original	Rechange
Repeat/Reveal/Subtitle	Subt
A-B/Update/DVD&Teletext	Text
Sub.T/Hold/Freeze	Media
Audio/Subpage	Dual
Red/Info	Red
Green/Angle	Green
Yellow/Slowf	Yellow
Blue	Blue

