


 
 




Original		Rechange		Original		Rechange	
	Standby		Power		CH+		CH+ / Page+
	Mute		Mute / Dimmer		Vol-		Vol-
	1		1		Zoom/Aspect		Shift + Zoom /
	2		2		Zoom/Aspect		Picture / Format
	3		3		CH-		CH- / Page-
	4		4		Menu		Menu / Home
	5		5		Up		Up
	6		6		Exit		Exit / Cancel / Clear
	7		7		Left		Left
	8		8		OK/Enter		OK
	9		9		Right		Right
	Recall		Back / Return		Sleep		Sleep / Timer
	0		0		Down		Down
	List		Smart / List		Source		AV / Input / RDS
	Vol+		Vol+		Red		Red / Netflix / Search
	Info/Display		Display / Media		Green		Green / APP / Repeat
	Info/Display		Info / Angle		Yellow		Yellow / YouTube / Repeat





	Original	Rechange		Original	Rechange
	Blue	 Prime Video RANDOM	Blue / Prime Video / Random		>>I
	TTX	 GOTO TEXT	Text / Goto		FAV
	Index	 TOP MENU D.MENU	D.Menu / Top		
	Hold	 SHIFT + HOLD	Shift + Stop /		
	I/II/Audio	 LANG I/II AUDIO	Audio / Lang I/II		
	Repeat/Rec	 REC MODE	Rec / Rec Mode		
	Repeat/Rec	 SHIFT + APP REPEAT	Shift + Green / APP /		
	Stop/Reveal	 HOLD	Stop / Hold		
	Play	 SLOW	Play / Slow		
	Pause	 STEP-FREEZE	Pause / Step / Freeze		
	Size	 SIZE ZOOM	Zoom / Size		
	Subtitle	 EQ SUBTITLE	Subtitle / EQ		
	<</Subpage	 TUNE-	<< / Tune-		
	>>	 TUNE+	>> / Tune+		
	Tv/Radio	 PROGRAM TV/RADIO	TV/Radio /		
	I<<	 PRESET-	I<< / Preset-		
	EPG	 GUIDE EPG	Guide / EPG / -/--		

