





 



 

 



 






 
 

























 
 

 






 

 


 






| Original | Rechange |
|---|--|
|  Power |  Power |
|  Mute |  Mute |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  -/-- |  Guide |
|  Return |  Back |
|  Picture |  Format |
|  TV / AV |  AV |
|  Up |  Up |

| Original | Rechange |
|--|---|
|  Up |  Ch + |
|  Down |  Down |
|  Down |  Ch - |
|  Right |  Right |
|  Right |  Vol + |
|  Left |  Left |
|  Left |  Vol - |
|  Menu |  Menu |
|  Menu |  Ok |
|  Sound |  Dual |
|  Display |  Info |
|  Nicam / A2 |  Options |
|  Cancel |  Exit |
|  Size |  3D |
|  Text / Mix |  Text |
|  Hold |  Pause |
|  Reveal |  D. Menu |



