



 

 


 
 

 


 


 
 
 


 
 
 
 
 

 

 

 




Original	Recharge
 Power	 Power
 Stop	 Stop
 Pause	 Pause
 Rec	 Rec
 <<<	 <<<
 Play	 Play
 >>>	 >>>
 *	 Menu
 Search	 TV/R
 [<>]	 Format
 Tv Guide	 Guide
 List	 List
 Sources	 AV
 Smart Tv	 Media
 Home	 Smart
 Tv/Exit	 Exit
 Red	 Red

Original	Recharge
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Info	 Info
 Options	 Options
 Back	 Back
 Multiview	 3D
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 CH+	 Ch +
 CH-	 Ch -



