













 













	Original	Recharge		Original	Recharge
	Phono	 8	8		
	CD	 3	3		
	Tuner	 6	6		
	AUX 1	 4	4		
	AUX 2	 7	7		
	Tape 1	 1	1		
	DCC/Tape 2	 2	2		
	Tape 3	 5	5		
	Processor	 Smart / List	Smart / List		
	Volume+	 Vol+	Vol+		
	Muting	 Mute / Dimmer	Mute / Dimmer		
	Volume-	 Vol-	Vol-		

