

 
 

 

 
 
 


 

 



 
 


 



 

 



 
 
 
 


 
 
 

 
 
 

 
 
 
 
 
 

 
 
 

 



 
 









Original		Rechange		Original		Rechange	
	Power		Power		Audio		Dual
	Open / Close		Eject		Clear		Exit
	HDD		Smart		Red		Red
	DVD		Media		Green / Subtitle		Green
	Prog +		Ch +		Green / Subtitle		Subt
	Prog -		Ch -		Yellow / Angle		Yellow
	Input		AV		Yellow / Angle		Format
	1		1		Blue / Play Mode		Blue
	2		2		Blue / Play Mode		Shift + Play
	3		3		System Menu		D. Menu
	4		4		Title List / Top Menu		Shift + Menu
	5		5		Title List / Top Menu		List
	6		6		Guide		Guide
	7		7		Menu		Menu
	8		8		TV / DVD		TV/R
	9		9		Info		Info
	0		0		Up		Up



