







 



 



 



 







 



 

 

 













 


 










 







Original		Recharge		Original		Recharge	
	Power		Power		Vol +		Vol+
	Mute		Mute / Dimmer		MTS		Audio / Lang I/II
	1		1		CH +		CH+ / Page+
	2		2		Vol -		Vol-
	3		3		REC List		Smart / List
	4		4		CH -		CH- / Page-
	5		5		FAV List		Fav / Marker / PC
	6		6		REC		Rec / Rec Mode
	7		7		Freeze		Pause / Step / Freeze
	8		8		Menu		Menu / Home
	9		9		Up		Up
	DTV / ATV		D.Menu / Top		Source		AV / Input / RDS
	0		0		Left		Left
	Recall		Back / Return		Enter		OK
	P.Mode		Picture / Format		Right		Right
	S.Mode		Sound / Title		Exit		Exit / Cancel / Clear
	Sleep		Sleep / Timer		Down		Down





Original	Recharge
DISPLAY	Display / Media
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
<< / Guide	<< / Tune-
<< / Guide	Guide / EPG / -/--
Play/Pause / Timeshift	Play / Slow
>> / Aspect	>> / Tune+
<< / Cancel	<< / Preset-
>>  / Subpage	>>  / Preset+
Stop / Index	Info / Angle
Stop / Index	Stop / Hold
TV / Radio	TV/Radio /
Subtitle	Subtitle / EQ
Reveal	Setup / OPT /
Size	Zoom / Size

Original	Recharge
Hold	+  Shift + Stop /
Text	Text / Goto

