







 



 



 



 







 



 

 

 



 









 


 










 







Original		Rechange		Original		Rechange	
	Power		Power		Vol +		Vol+
	Mute		Mute / Dimmer		MTS		Audio / Lang I/II
	1		1		CH +		CH+ / Page+
	2		2		Vol -		Vol-
	3		3		REC List		Smart / List
	4		4		CH -		CH- / Page-
	5		5		FAV List		Fav / Marker / PC
	6		6		REC		Rec / Rec Mode
	7		7		Freeze		Pause / Step / Freeze
	8		8		Menu		Menu / Home
	9		9		Up		Up
	DTV / ATV		D.Menu / Top		Source		AV / Input / RDS
	0		0		Left		Left
	Recall		Back / Return		Enter		OK
	P.Mode		Picture / Format		Right		Right
	S.Mode		Sound / Title		Exit		Exit / Cancel / Clear
	Sleep		Sleep / Timer		Down		Down





Original	Recharge	Original	Recharge
Display	Display / Media	Hold	+ Shift + Stop /
Red	Red / Netflix / Search	Text	Text / Goto
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
<< / Guide	<< / Tune-		
<< / Guide	Guide / EPG / -/--		
Play/Pause / Timeshift	Play / Slow		
>> / Aspect	>> / Tune+		
<< / Cancel	<< / Preset-		
>> / Subpage	>> / Preset+		
Stop / Index	Info / Angle		
Stop / Index	Stop / Hold		
TV / Radio	TV/Radio /		
Subtitle	Subtitle / EQ		
Reveal	Setup / OPT /		
Size	Zoom / Size		

