







 



 



 



 







 



 

 

 



 


 






 


 










 







Original		Rechange		Original		Rechange	
	Power		Power		Vol +		Vol+
	Mute		Mute / Dimmer		MTS		Audio / Lang I/II
	1		1		CH +		CH+ / Page+
	2		2		Vol -		Vol-
	3		3		REC List		Smart / List
	4		4		CH -		CH- / Page-
	5		5		FAV List		Fav / Marker / PC
	6		6		REC		Rec / Rec Mode
	7		7		Freeze		Pause / Step / Freeze
	8		8		Menu		Menu / Home
	9		9		Up		Up
	DTV / ATV		D.Menu / Top		Source		AV / Input / RDS
	0		0		Left		Left
	Recall		Back / Return		Enter		OK
	P.Mode		Picture / Format		Right		Right
	S.Mode		Sound / Title		Exit		Exit / Cancel / Clear
	Sleep		Sleep / Timer		Down		Down





Original	Recharge
DISPLAY Display	MEDIA DISPLAY Display / Media
Red	NETFLIX SEARCH Red / Netflix / Search
Green	APP REPEAT Green / APP / Repeat
Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat
Blue	Prime Video RANDOM Blue / Prime Video / Random
<< / Guide	TUNE- << / Tune-
>> / Guide	TUNE+ >> / Tune+
Play/Pause / Timeshift	SLOW Play / Slow
>> / Aspect	PRESET- >> / Aspect
<<< / Cancel	PRESET+ <<< / Cancel
>>  / Subpage	PRESET+ >>  / Preset+
Stop / Index	INFO Stop / Index
Stop / Index	HOLD Stop / Hold
TV / Radio	PROGRAM TV/RADIO TV/Radio /
Subtitle	EQ SUBTITLE Subtitle / EQ
Reveal	OPT-TOOLS SETUP Setup / OPT /
Size	SIZE ZOOM Zoom / Size

Original	Recharge
Hold	SHIFT + HOLD Shift + Stop /
Text	GOTO TEXT Text / Goto

