


 

 
 
 
 
 





Original	Rechange	Original	Rechange
 Power	 Power	 USB	 AV
 Mute	 Mute	 Menu	 Menu
 1	 1	 EPG	 Guide
 2	 2	 Exit	 Exit
 3	 3	 Goto	 Smart
 4	 4	 Play	 Play
 5	 5	 Pause	 Pause
 6	 6	 <<	 <<
 7	 7	 >>	 >>
 8	 8	 Rec	 Rec
 9	 9	 Stop	 Stop
 0	 0	 UP	 Up
 Info	 Info	 Down	 Down
 FAV	 Pre Ch	 Right	 Right
 Page+	 >>	 Left	 Left
 Page-	 <<	 OK	 Ok
 Audio	 Dual	 CH+	 Ch +

Original	Rechange	Original	Rechange
 MUTE	 MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 PLAY MODE	 REC MODE	 PLAY	 PAUSE
 STOP	 SKIP BACKWARD	 SKIP FORWARD	 SKIP FORWARD
 DISC NAV	 SOUND	 AD	 SETTINGS
 LIST	 DUAL	 SUBT	 OPT
 PROG	 SEARCH	 PICTURE	 ECO
 SLEEP	 TV/R	 FORMAT	 3D
 E-MANUAL	 REPEAT	 ZOOM	 TIMER
 D.MENU	 TEXT	 AV	
 TOP MENU	 DISPLAY	 MENU	 INFO
 OK	 OK	 EXIT	 RETURN BACK
 VOL+	 HOME SMART	 VOL-	 CH-
 APP	 MEDIA	 1	 2
 CH+	 3	 4	 5
 1	 2	 6	 7
 2	 3	 8	 9
3	4	0	FAV
4	5	GUIDE	PRE-CH
5	6	A	B
6	7	C	D
7	8		
8	9		





Original		Rechange		Original	Rechange
	CH-		Ch -		
	Vol+		Vol +		
	Vol-		Vol -		
	TV/Radio		TV/R		
	Teletext		Text		
	Subtitle		Subt		
	Recall		Back		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		

