 











 

 

 


 
 




 














 






 



 
 

 


 

 




 






Original	Rechange
 Power	 Power
 Open / Close	 Eject
 Dimmer /	 TV/R
 DVD	 Shift + 1
 Tuner / B and	 Shift + 2
 AUX	 Shift + 3
 NTSC/PAL / EZ	 Smart
 Mo/St / Slow	 Shift + Play
 Sub Title	 Subt
 Step	 Shift + Pause
 DSP / EQ	 Dual
 Repeat	 Text
 I<<	 I<<
 Stop	 Stop
 Play / Pause	 Play
 Play / Pause	 Pause
 >>I	 >>I

Original	Rechange
 DOLBY PLII	 Green
 Volume +	 Vol +
 Volume -	 Vol -
 Tuning + / CH +	 Ch +
 Tuning - / CH -	 Ch -
 DOLBY PLII	 Yellow
 Return	 Back
 Menu	 Menu
 Info	 Info
 Mute	 Mute
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 Enter	 Ok
 1 / RDS Display	 1
 2	 2





Original	Rechange
 3 / TA	 3
 4 / PTY -	 4
 5 / PTY Search	 5
 6 / PTY +	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Sleep	 Sleep
 Cancel	 Exit
 Test Tone	 Red
 Sound Edit	 Shift + Dual
 P.Scan / Tuner	 Media
 Zoom	 Shift + Eject
 Logo	 3D
 Slide Mode	 AV
 Digest	 D. Menu

Original	Rechange
 Remain	 Format





Original	Recharge
Power	Power
Mute	Mute
Menu	Menu
Cancel	Exit
1 / RDS Display	1
2	2
3 / TA	3
4 / PTY -	4
5 / PTY Search	5
6 / PTY +	6
7	7
8	8
9	9
0	0
Volume +	Vol +
Volume -	Vol -
Tuning + / CH +	Ch +

Original	Recharge
Tuning - / CH -	Ch -
Up	Up
Right	Right
Down	Down
Left	Left
Enter	Ok
Sleep	Sleep
TV / Video /	TV/R
Info	Info

