



| Original | Rechange |
|---|---|
|  Dimmer |  Shift + Mute / Dimmer |
|  Sleep |  Sleep / Timer |
|  Power |  Power |
|  Display |  Display / Media |
|  Auto Preset |  D.Menu / Top |
|  FM Mode |  Setup / OPT / |
|  Program |  TV/Radio / |
|  Random |  Blue / Prime Video / Random |
|  Repeat |  Green / APP / Repeat |
|  AHB PRO |  Zoom / Size |
|  Door Slide |  Subtitle / EQ |
|  CD Open/Close |  Eject / Surround |
|  Bass |  Audio / Lang I/II |
|  Treble |  Sound / Title |
|  Cancel |  Exit / Cancel / Clear |
|  PTY EON |  Picture / Format |
|  Up |  Up |

| Original | Rechange |
|---|---|
|  Display Mode |  Info / Angle |
|  Left |  Left |
|  Set |  Menu / Home |
|  Right |  Right |
|  Fade Muting |  Mute / Dimmer |
|  Down |  Down |
|  MD / AUX |  7 |
|  CD Play/Pause |  Pause / Step / Freeze |
|  CD Play/Pause |  Play / Slow |
|  FM / AM |  6 |
|  I<< |  I<< / Preset- |
|  Stop |  Stop / Hold |
|  >>I |  >>I / Preset+ |
|  Volume + |  Vol+ |
|  Volume - |  Vol- |

