


 





 



 



 



 

 


 















 


 



 


 

 












Original		Rechange		Original		Rechange	
	Power		Power		Still		Pause
	DTV / ATV		Smart		P -		Ch -
	1		1		P +		Ch +
	2		2		V -		Vol -
	3		3		V +		Vol +
	4		4		Sleep		Sleep
	5		5		Mute		Mute
	6		6		MTS		Shift + Media
	7		7		Menu		Menu
	8		8		Source		AV
	9		9		Up		Up
	0		0		Right		Right
	-/--		Shift + Guide		Down		Down
	Recall		Back		Left		Left
	P.Mode		Shift + Format		Enter		Ok
	S.Mode		Dual		Exit		Exit
	Aspect		Format		i		Info





Original		Rechange		Original		Rechange	
	Red		Red		TV / Radio		TV/R
	Green		Green		List		List
	Yellow		Yellow		FAV		Pre Ch
	Blue		Blue		EPG		Guide
	Text / <<		Text		Rec		Rec
	Text / <<		<<		Rec Menu		Shift + Rec
	Hold / >>		>>		T.Shift		Shift + Smart
	Hold / >>		Shift + Pause		USB		Media
	Mix / I<<		I<<				
	Mix / I<<		Shift + Text				
	Timer / >>I		>>I				
	[≡] / Play/Pause		Play				
	[≡] / Play/Pause		Shift + Info				
	Size / Stop		Stop				
	Size / Stop		Eject				
	[?]		D. Menu				
	Subtitle		Subt				

