


 






 


 
 

 
 
 
 
 


 
 
 
 

 
 
 
 
 
 
 


 
 




 


 



 







 
 












 

















Original		Recharge		Original		Recharge	
	Power		Power		CH List		List
	Source		AV		CH+		Ch +
	1		1		CH-		Ch -
	2		2		Netflix		Shift + Media
	3		3		Home		Smart
	4		4		Rakuten Tv		TV/R
	5		5		Prime Video		Media
	6		6		Guide		Guide
	7		7		Return		Back
	8		8		Exit		Exit
	9		9		Up		Up
	0		0		Down		Down
	TTX/MIX		Text		Right		Right
	PRE-CH		Pre Ch		Left		Left
	Vol+		Vol +		OK		Ok
	Vol-		Vol -		Red		Red
	Mute		Mute		Green		Green





Original		Recharge		Original		Recharge	
	Yellow		Yellow				
	Blue		Blue				
	Settings/[≡i]		Options				
	Info/[≡?]		Info				
	AD/Subt./[≡◇]		Subt				
	Stop		Stop				
	<<		<<				
	<<		<<				
	Play		Play				
	Pause		Pause				
	>>		>>				
	>>		>>				

