



















 





 





 

 









 



























Original	Rechange	Original	Rechange
	Power		Power
	Mute		Mute / Dimmer
	Play / Pause		Play / Slow
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	I<		I<< / Preset-
	>I		>>I / Preset+
	C		Subtitle / EQ
	Aspect		Picture / Format
	Menu		Menu / Home
	Up		Up
	Info		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Quit		Back / Return
	Vol +		Vol+
	Liste		Smart / List
	P +		CH+ / Page+
	Vol -		Vol-
	P -		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Guide		Guide / EPG / -/-





Original	Recharge
0	0
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Play / Pause	Shift + Play /
C	Shift + Subtitle / EQ
Retour	Shift + Back / Return

Original	Recharge

