 

 
 







 







 

















 



 






 

 

 




 


 
 


 











Original		Recharge		Original		Recharge	
	Standby		Power		Display		Info
	Mute		Mute		TV / Radio		TV/R
	1		1		Up		Up
	2		2		Right		Right
	3		3		Down		Down
	4		4		Left		Left
	5		5		OK		Ok
	6		6		Menu		Menu
	7		7		Exit		Exit
	8		8		Vol +		Vol +
	9		9		Vol -		Vol -
	0		0		FAV		Shift + Pre Ch
	Reclist		Smart		Rec		Rec
	Recall		Pre Ch		Media		Media
	EPG		Guide		CH +		Ch +
	Subtitle		Subt		CH -		Ch -
	Audio		Dual		Source		AV





Original	Rechange
 P.Mode	 Format
 S.Mode	 Shift + Dual
 Sleep	 Sleep
 Text	 Text
 Reveal	 3D
 Subpage	 Shift + Subt
 Play/Pause / Timeshift	 Play
 Play/Pause / Timeshift	 Pause
 Stop	 Stop
 Index	 Shift + Info
 Size	 Eject
 <<<	 <<<
 >>>	 >>>
  <<<	  <<<
 >>>	 >>>
 Red	 Red
 Green	 Green

Original	Rechange
 Yellow	 Yellow
 Blue	 Blue

