

 







 







 





































 



 







 





 



 

 



































Original	Rechange	Original	Rechange
 Power	 Power	 Up	 Up
 16:9 / Wide	 Picture / Format	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 Vol +	 Vol+
 4	 4	 Menu	 Menu / Home
 5	 5	 CH +	 CH+ / Page+
 6	 6	 Vol -	 Vol-
 7	 7	 Source	 AV / Input / RDS
 8	 8	 CH -	 CH- / Page-
 9	 9	 Info	 Info / Angle
 0	 0	 Sleep	 Sleep / Timer
 F1	 Exit / Cancel / Clear	 Recall	 Back / Return
 [:≡]	 D.Menu / Top	 L / R	 Eject / Surround
 Smart S	 Sound / Title	 Index / Play	 Play / Slow
 Smart P	 Shift + Picture / Format	 Index / Play	 Display / Media

Original	Rechange	Original	Rechange
 DIMMER MUTE	 SHIFT	 TV	 DVD
 STEP - FREEZE	 HOLD	 TUNE-	 TUNE+
 PRESET-	 PRESET+	 TITLE	 LANG VUI
 EQ	 SURROUND	 SOUND	 AUDIO
 SUBTITLE	 PROGRAM	 FORMAT	 ZOOM
 SLEEP	 TV RADIO	 TOP MENU	 OPT-TOOLS
 GOTO	 RDS	 D.MENU	 SETUP
 TEXT	 AV INPUT	 HOME	 ANGLE
 MENU	 INFO	 OK	 RETURN
 CLEAR	 BACK	 EXIT	 CANCEL
 LIST	 SMART	 VOL +	 CH PAGE +
MEDIA	DISPLAY	TV	DVD
CD - STB	VIDEO	TAPE	TUNER
Mandis	AUX - HDD	USB	BLUETOOTH
7	8	HDMI - BAT	FC
GUIDE EPG	0	FAV MARKER	NETFLIX
APP	YouTube	Prime Video	SEARCH
REPEAT	REPEAT A-B	RANDOM	Mandis SHOP
www.mandis.tv			





	Original	Recharge	Original	Recharge
	Zoom / Pause	Zoom / Size	Green / Subtitle	Green / APP / Repeat
	Zoom / Pause	Pause / Step / Freeze	Yellow / Fav	Fav / Marker / PC
	Reveal / Stop	Stop / Hold	Yellow / Fav	Yellow / YouTube / Repeat
	Reveal / Stop	Setup / OPT /	Blue / EPG	Guide / EPG / -/--
	TTX	Text / Goto	Blue / EPG	Blue / Prime Video / Random
	Hold / I<<	I<< / Preset-		
	Hold / I<<	Shift + Stop /		
	List / >>I	>>I / Preset+		
	List / >>I	Smart / List		
	Language / <<	<< / Tune-		
	Language / <<	Audio / Lang I/II		
	Save / >>	>> / Tune+		
	Save / >>	Shift + Rec / Rec Mode		
	Red / Radio / Rec	Rec / Rec Mode		
	Red / Radio	Red / Netflix / Search		
	Red / Radio / Rec	TV/Radio /		
	Green / Subtitle	Subtitle / EQ		

