



| Original | Rechange |
|----------|--------------------|
| P100 | Guide / EPG / -/-- |
| Power | Power |
| REV | Sleep / Timer |
| DOUB | Smart / List |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| Hold | Stop / Hold |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| SUB | Subtitle / EQ |
| Update | Display / Media |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| MIX | D.Menu / Top |

| Original | Rechange |
|----------|------------------|
| AV | AV / Input / RDS |
| 0 | 0 |
| TV | TV/Radio / |
| P+ | Up |
| P+ | CH+ / Page+ |
| Mute | Mute / Dimmer |
| TV/TXT | Text / Goto |
| Menu | Menu / Home |
| Vol- | Vol- |
| Vol- | Left |
| OK | OK |
| Vol+ | Vol+ |
| Vol+ | Right |
| SWAP | Back / Return |
| P- | CH- / Page- |
| P- | Down |
| 16:9 | Picture / Format |



Menu

