


 
 





 










 

 

 















 





 









 



 










Original	Rechange	Original	Rechange
 Power	 Power	 Pause / Step	 Pause
 Open / Close	 Eject	 I<< Prev	 I<<
 Input	 AV	 >>I Next	 >>I
 DVD	 Smart	 Stop	 Stop
 VCR	 Media	 << Rew	 <<
 TV / VCR	 TV/R	 Play	 Play
 Setup	 Menu	 >> FFW	 >>
 Disc Menu	 D. Menu	 1	 1
 Up / PR/TRK +	 Up	 2	 2
 Up / PR/TRK +	 Ch +	 3	 3
 Down / PR/TRK -	 Down	 4	 4
 Down / PR/TRK -	 Ch -	 5	 5
 Right	 Right	 6	 6
 Left	 Left	 7	 7
 OK	 Ok	 8	 8
 Display	 Info	 9	 9
 Back	 Back	 0	 0






 
 


 











 











 





 

 







 



 



 

 


 









	Original	Recharge
	Program	 Sleep
	Clear	 Exit
	Audio	 Dual
	Subtitle	 Subt
	Angle	 Format
	Zoom	 Shift + Eject
	Marker	 Pre Ch
	Repeat	 Text
	Repeat A-B	 Shift + Text
	Shuffle / Skip	 3D
	Search	 Shift + TV/R
	Title / Speed	 List

	Original	Recharge





Original	Rechange	Original	Rechange
 Power	 Power	 << Rew	 <<
 Open / Close	 Eject	 Play	 Play
 Input	 AV	 >> FFW	 >>
 DVD	 Smart	 1	 1
 VCR	 Media	 2	 2
 TV / VCR	 TV/R	 3	 3
 Setup	 Menu	 4	 4
 Up / PR/TRK +	 Up	 5	 5
 Up / PR/TRK +	 Ch +	 6	 6
 Down / PR/TRK -	 Down	 7	 7
 Down / PR/TRK -	 Ch -	 8	 8
 Right	 Right	 9	 9
 Left	 Left	 0	 0
 OK	 Ok	 Clear	 Exit
 Display	 Info	 Marker	 Pre Ch
 Pause / Step	 Pause	 Record	 Rec
 Stop	 Stop	 Search	 Shift + TV/R





Original	Recharge	Original	Recharge
 Showview / Video Plus +	 Options		

