


 





































































 

 


	Original	Recharge	Original	Recharge
	Power			Timer
	Open/Close			AV
	USB			Sleep
	CD			DBB
	Tuner			DSC
	AUX			RDS/News
	Vol-			Mute
	Vol+			Repeat
	I<<			Shuffle
	>>I			
	Album/Preset			
	Album/Preset			
	Stop			
	Play / Pause			
	Play / Pause			
	Program			Shift + Sleep
	Clock/Display			Info







	Original	Recharge	Original	Recharge
	USB	 D		Blue
	CD	 C		Yellow
	Tuner	 B		Green
	AUX	 A		Red
	Open/Close	 ZOOM		Eject
	Power			Power
	Vol+	 + VOL		Vol +
	Vol-	 - VOL		Vol -
	Clock/Display	 DISPLAY INFO		Info
	Timer	 TIMER AV		AV
	Sleep	 PROG SLEEP		Sleep
	DBB	 SOUND DUAL		Dual
	DSC	 AD SUBT		Subt
	RDS/News	 SEARCH TV/R		TV/R
	Mute	 MUTE		Mute

