


 


 









 

 

 

 





 





















 





Original	Rechange	Original	Rechange
	Power		Power
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	<		<< / Preset-
	Pause		Pause / Step / Freeze
	>		>>  / Preset+
	Info		Info / Angle
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	Titles		Subtitle / EQ
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
			Left
			Up
			Right
			P +
			CH+ / Page+
			OK
			P -
			CH- / Page-
			Down
			P < P
			Smart / List
			Back
			Back / Return
			Guide
			Guide / EPG / -/--
			1
			2
			3
			4
			5
			6
			7



