

























 
 
 











 







 























| Original  | Rechange | Original  | Rechange                   |
|---|----------|---|----------------------------|
|      | Power    |      | Power                      |
|      | TV / SAT |      | Shift + TV/Radio / Program |
|      | Pause    |      | Pause / Step / Freeze      |
|      | Sleep    |      | Sleep / Timer              |
|      | 1        |      | 1                          |
|      | 2        |      | 2                          |
|      | 3        |      | 3                          |
|      | 4        |      | 4                          |
|      | 5        |      | 5                          |
|      | 6        |      | 6                          |
|     | 7        |     | 7                          |
|    | 8        |    | 8                          |
|    | 9        |    | 9                          |
|    | RCL      |    | Setup / OPT /              |
|    | 0        |    | 0                          |
|    | EPG      |    | Guide / EPG / -/--         |
|    | Menu     |    | Menu / Home                |
|    | Up       |    | Up                         |
|    | Mode     |    | D.Menu / Top               |
|    | Left     |    | Left                       |
|    | OK       |    | OK                         |
|    | Right    |    | Right                      |
|    | Exit     |    | Exit / Cancel / Clear      |
|    | Down     |    | Down                       |
|    | TV / Rad |    | TV/Radio /                 |
|    | Color    |    | Picture / Format           |
|    | i        |    | Info / Angle               |
|   | Help     |   | Shift + Info / Angle       |
|  | Mute     |  | Mute / Dimmer              |
|  | Audio    |  | Audio / Lang I/II          |
|  | Subtitle |  | Subtitle / EQ              |
|  | Red      |  | Red / Netflix / Search     |
|  | Green    |  | Green / APP / Repeat       |
|  | Yellow   |  | Yellow / YouTube / Repeat  |



