





 





 



 





 



 





 

 



 

 



 



 

 
 


 
 




 



 







Original	Rechange
 Mute	 Mute / Dimmer
 Power	 Power
 More	 Display / Media
 ?	 Guide / EPG / -/--
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Zoom	 Zoom / Size
 0 / AV	 0
 0 / AV	 AV / Input / RDS

Original	Rechange
 OPT	 Setup / OPT /
 SFI	 Picture / Format
 TV / Radio	 TV/Radio /
 Genre	 Smart / List
 Rec	 Rec / Rec Mode
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Red	 Red / Netflix / Search
 Up	 Up
 Blue	 Blue / Prime Video / Random
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Info	 Info / Angle
 Down	 Down
 <<	 << / Tune-





 

 

 

 

 

 

 

 

 

 

 



 







 

 

 

 

 



 


 
 

 

 

 
 




 







Original	Recharge	Original	Recharge
Stop	Stop / Hold		
Play / Pause	Play / Slow		
Play / Pause	Pause / Step / Freeze		
>>	>> / Tune+		
Prog -	CH- / Page-		
Prog +	CH+ / Page+		
Volume -	Vol-		
Volume +	Vol+		
TXT	Text / Goto		
Still	Shift + Pause / Step /		
Sound	Sound / Title		
PIP	D.Menu / Top		
Menu	Menu / Home		
HDMI	Shift + 0		





Original	Rechange
 Mute	 Mute / Dimmer
 Power	 Power
 More	 Fav / Marker / PC
 ?	 Smart / List
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Aspect / Zoom	 Zoom / Size
 0 / AV	 0
 0 / AV	 AV / Input / RDS

Original	Rechange
 OPT	 Setup / OPT /
 SFI	 Display / Media
 TV / Radio	 TV/Radio /
 Genre	 D.Menu / Top
 Rec	 Rec / Rec Mode
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Red	 Red / Netflix / Search
 Up	 Up
 Blue	 Blue / Prime Video / Random
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Info	 Info / Angle
 Down	 Down
 <<	 << / Tune-





Original	Rechange	Original	Rechange
	Stop / Hold		
	Play / Slow		
	>> / Tune+		
	CH- / Page-		
	CH+ / Page+		
	Vol-		
	Vol+		
	Text / Goto		
	Pause / Step / Freeze		
	Sound / Title		
	Picture / Format		
	Menu / Home		
	+ Shift + 0		





Original	Rechange
	Mute
	Power
	More
	?
	Sleep
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Zoom
	0 / AV
	0 / AV

Original	Rechange
	OPT
	SFI
	TV / Radio
	Genre
	Rec
	Green
	Yellow
	Red
	Up
	Blue
	Left
	OK
	Right
	Exit
	Info
	Down
	<< / Tune-





Original	Rechange	Original	Rechange
	 Stop / Hold		
	 Play / Slow		
	 Pause / Step / Freeze		
	 >> / Tune+		
	 CH- / Page-		
	 CH+ / Page+		
	 Vol-		
	 Vol+		
	 Text / Goto		
	 Shift + Pause / Step /		
	 Sound / Title		
	 D.Menu / Top		
	 Menu / Home		
	 Shift + 0		

