 









 
















 


 

 

















Original	Rechange
 Power	 Power
 Source	 AV / Input / RDS
 Teletext	 Text / Goto
 Split	 Display / Media
 Subtitle	 Subtitle / EQ
 Aspect	 Picture / Format
 Green	 Green / APP / Repeat
 Red / Demo	 Red / Netflix / Search
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Guide	 Guide / EPG / -/--
 Info	 Info / Angle
 Up	 Up
 Right	 Right
 Down	 Down
 OK	 OK
 Option	 Setup / OPT /

Original	Rechange
 Left / Back	 Left
 Left / Back	 Back / Return
 Vol +	 Vol+
 Menu / Browse / Exit	 Menu / Home
 Menu / Browse / Exit	 Exit / Cancel / Clear
 Vol -	 Vol-
 Mute	 Mute / Dimmer
 P +	 CH+ / Page+
 P -	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8





Original		Rechange		Original		Rechange	
9	9	BLUETOOTH 9	9				
0	0	HDMI - BAT 0	0				
P=P	P <--> P	PC FAV MARKER	Fav / Marker / PC				
MHEG CANCEL	MHEG / Cancel	LIST SMART	Smart / List				

