




 

 





 

 









 











| Original | | Recharge | | Original | | Recharge | |
|----------|------------|----------|--------------------|----------|--------------|----------|-----------------------------|
| | Power | | Power | | Menu | | Menu / Home |
| | TV / Radio | | TV/Radio / | | Exit | | Exit / Cancel / Clear |
| | Mute | | Mute / Dimmer | | Up | | Up |
| | 1 | | 1 | | Left | | Left |
| | 2 | | 2 | | OK | | OK |
| | 3 | | 3 | | Right | | Right |
| | 4 | | 4 | | Vol + | | Vol+ |
| | 5 | | 5 | | Down | | Down |
| | 6 | | 6 | | Page + | | CH+ / Page+ |
| | 7 | | 7 | | Vol - | | Vol- |
| | 8 | | 8 | | Page - | | CH- / Page- |
| | 9 | | 9 | | Red / Audio | | Red / Netflix / Search |
| | Recall | | Back / Return | | Red / Audio | | Audio / Lang I/II |
| | 0 | | 0 | | Blue / Pause | | Shift + Pause / Step / |
| | Sat | | Shift + 0 | | Blue / Pause | | Blue / Prime Video / Random |
| | EPG | | Guide / EPG / -/-- | | Green / Zoom | | Zoom / Size |
| | FAV | | Fav / Marker / PC | | Green / Zoom | | Green / APP / Repeat |





| Original | | Rechange | | Original | Rechange |
|---|------------|---|---------------------------|----------|----------|
|  | Yellow / i |  | Info / Angle | | |
|  | Yellow / i |  | Yellow / YouTube / Repeat | | |
|  | F1 / White |  | Shift + 1 | | |
|  | F2 / Sub |  | Subtitle / EQ | | |
|  | F2 / Sub |  | Shift + 2 | | |
|  | F3 |  | Shift + 3 | | |
|  | TXT |  | Text / Goto | | |
|  | << |  | << / Tune- | | |
|  | >> |  | >> / Tune+ | | |
|  | Play |  | Play / Slow | | |
|  | Stop / USB |  | Stop / Hold | | |
|  | Stop / USB |  | Shift + 8 | | |
|  | Stop / USB |  | Display / Media | | |
|  | I<< |  | I<< / Preset- | | |
|  | >>I |  | >>I / Preset+ | | |
|  | Pause |  | Pause / Step / Freeze | | |
|  | Rec |  | Rec / Rec Mode | | |

