



Original	Rechange
 Standby	 Power
 Source	 AV / Input / RDS
 Home	 Shift + Menu /
 e	 D.Menu / Top
 Mouse	 Info / Angle
 TV / Radio	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Display	 Display / Media
 0	 0

Original	Rechange
 Recall	 Back / Return
 Recall	 Fav / Marker / PC
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 Down	 Down
 Stop	 Stop / Hold
 Vol +	 Vol+
 TXT	 Text / Goto
 CH +	 CH+ / Page+
 Vol -	 Vol-
 Mute	 Mute / Dimmer





Original	Rechange	Original	Rechange
 CH -	 CH - / Page-		
 Mix / Fav. List	 Subtitle / EQ		
 Mix / Fav. List	 Smart / List		
 Size / Subtitle	 Zoom / Size		
 Cancel / Audio	 Audio / Lang I/II		
 Refresh	 Guide / EPG / -/--		
 << / Index	 << / Tune-		
 >> / Hold	 >> / Tune+		
 I<< / Reveal	 I<< / Preset-		
 >>I / Subpage	 >>I / Preset+		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		

Original	Rechange	Original	Rechange

