



Original		Rechange		Original		Rechange	
	Power		Power		hold / EPG		Guide
	Mute		Mute		Red		Red
	1		1		Green		Green
	2		2		Yellow		Yellow
	3		3		Blue		Blue
	4		4		Vol +		Vol +
	5		5		Vol -		Vol -
	6		6		I-II		Dual
	7		7		Source		AV
	8		8		CH +		Ch +
	9		9		CH -		Ch -
	0		0		Sleep		Sleep
	Text		Text		Menu		Menu
	Back / S.Page		Back		DTV / Radio		TV/R
	index / PVR List		Smart		Exit		Exit
	reveal / REC		Rec		Aspect		Format
	zoom / T.Shift		Eject		Up		Up





Original	Rechange		
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	P.Mode	+	Shift + Format
	S.Mode	+	Shift + Dual
	Media		Media
	Slow / Info		Info
	Slow / Info	+	Shift + Play
	Step / Subtitle		Subt
	Freeze	+	Shift + Stop
	Step / Subtitle	+	Shift + Pause
	Play / Pause		Play
	Play / Pause		Pause
	I<<		I<<
	>>I		>>I
	Stop		Stop

Original	Rechange		
	<<		<<
	>>		>>
	FAV		Pre Ch
	Repeat / Fav +	+	Shift + Right
	A-B / Fav -	+	Shift + Left

