









 
 

 

 



 
 



 


 
 



 








 




 

 
 
 

 
 
 



 
 
 

 
 



 


 
 


 
 




Original	Rechange	Original	Rechange
 Power	 Power	 Vol+	 Vol +
 Input	 AV	 Vol-	 Vol -
 1	 1	 Mute	 Mute
 2	 2	 [i+]	 Info
 3	 3	 Guide	 Guide
 4	 4	 Back	 Back
 5	 5	 Exit	 Exit
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 OK	 Ok
 Lang	 Dual	 Red	 Red
 TXT	 Text	 Green	 Green
 P+	 Ch +	 Yellow	 Yellow
 P-	 Ch -	 Blue	 Blue
 Home	 Smart	 Prime Video	 Shift + Smart

Original	Rechange	Original	Rechange
 Power	 Power	 TV	 TV
 Input	 AV	 DVD	 DVD
 1	 1	 SAT	 SAT
 2	 2	 AUX	AUX
 3	 3	 PLAY MODE	 PLAY MODE
 4	 4	 REC MODE	 REC MODE
 5	 5	 Play	 Play
 6	 6	 Pause	 Pause
 7	 7	 Stop	 Stop
 8	 8	 Fast Backward	 Fast Backward
 9	 9	 Fast Forward	 Fast Forward
 0	 0	 Disc Nav	 Disc Nav
 Lang	 Dual	 Sound	 Sound
 TXT	 Text	 AD	 AD
 P+	 Ch +	 Settings	 Settings
 P-	 Ch -	 List	 List
 Home	 Smart	 Subt	 Subt
		 Opt	 Opt
		 Prog	 Prog
		 Search	 Search
		 Picture	 Picture
		 Eco	 Eco
		 Sleep	 Sleep
		 TV/R	 TV/R
		 Format	 Format
		 3D	 3D
		 Timer	 Timer
		 E-Manual	 E-Manual
		 Repeat	 Repeat
		 Zoom	 Zoom
		 D.Menu	 D.Menu
		 Text	 Text
		 AV	 AV
		 Top Menu	 Top Menu
		 Display	 Display
		 Menu	 Menu
		 Info	 Info
		 OK	 OK
		 Clear	 Clear
		 Return	 Return
		 Exit	 Exit
		 Back	 Back
		 Home	 Home
		 Smart	 Smart
		 App	 App
		 Media	 Media
		 CH+	 CH+
		 CH-	 CH-
		 1	 1
		 2	 2
		 3	 3
		 4	 4
		 5	 5
		 6	 6
		 7	 7
		 8	 8
		 9	 9
		 FAV	 FAV
		 GUIDE	 GUIDE
		 0	 0
		 PRE-CH	 PRE-CH
		 A	 A
		 B	 B
		 C	 C
		 D	 D
		 Mandis SHOP	 Mandis SHOP
		 www.mandis.tv	 www.mandis.tv



