



Original		Rechange		Original		Rechange	
	Power		Power		Recall		Pre Ch
	Mute		Mute		Sub		Subt
	Aspect		Format		Text		Text
	Sound		Shift + Dual		Mix		Shift + Text
	Picture		Shift + Format		Size		Eject
	EPG		Guide		Hold		Shift + Stop
	1		1		Reveal		Options
	2		2		Sub.Page		Shift + Subt
	3		3		Index		Shift + Info
	4		4		Info		Info
	5		5		FAV		Shift + Pre Ch
	6		6		Menu		Menu
	7		7		Input		AV
	8		8		Audio		Dual
	9		9		Up		Up
	0		0		Right		Right
	List		List		Down		Down





Original		Rechange		Original		Rechange	
	Left		Left		>>I		>>I
	OK		Ok		<<		<<
	Back		Back		>>		>>
	Exit		Exit		Red		Red
	Vol +		Vol +		Green		Green
	Vol -		Vol -		Yellow		Yellow
	Sleep		Sleep		Blue		Blue
	Prog	+	Shift + Sleep				
	CH +		Ch +				
	CH -		Ch -				
	Play / Pause		Play				
	Play / Pause		Pause				
	Stop		Stop				
	Source HDMI		Media				
	TV / R		TV/R				
	Source DTV		Smart				
	I<<		I<<				

