


 





 

 

 

 
 


 
 


 










 
 

 
 
 

 

 

 





 
 


 




 



 
 
 





Original		Rechange		Original		Rechange	
	Power		Power		P.Mode		Shift + Format
	Mute		Mute		Recall		Back
	1		1		Menu		Menu
	2		2		Display		Info
	3		3		Media		Media
	4		4		Exit		Exit
	5		5		Rec		Rec
	6		6		CH -		Ch -
	7		7		Vol +		Vol +
	8		8		Vol -		Vol -
	9		9		Guide		Guide
	0		0		CH +		Ch +
	-/--		Shift + Guide		Fav +		Pre Ch
	Nicam		Options		Up		Up
	Source		AV		TV / Radio		TV/R
	S.Mode		Shift + Dual		Fav -		Shift + Pre Ch
	Sleep		Sleep		Down		Down





Original		Rechange		Original		Rechange	
	Right		Right		Cyan		Blue
	Left		Left				
	Enter		Ok				
	Play/Pause / Hold		Play				
	Play/Pause / Hold		Pause				
	Aspect		Format				
	<< / Size		<<				
	>> / Reveal		>>				
	Stop / Index		Stop				
	Lang		Dual				
	I<< / Subpage		I<<				
	>>I / Auto		>>I				
	Subtitle		Subt				
	Text		Text				
	Red		Red				
	Green		Green				
	Yellow		Yellow				

