

 
 
 


 


 






 
 


 



 

 


 





 
 
 
 
 

 
 

 
 
 








| Original    | Recharge  | Original   | Recharge   |
|-------------|---|------------|--|
| On/Off      |  Power   | Display    |  +  Shift + Info |
| Mute        |  Mute    | Menu Right |  Right  |
| Update      |  Smart   | Menu Off   |  Exit   |
| Reveal      |  Media   | Menu Down  |  Down   |
| Txt Stop    |  Stop    | Back       |  Back   |
| Subt.List   |  Subt    | Volume+    |  Vol +  |
| Sleep Timer |  Sleep   | Chan.Up    |  Ch +   |
| Info        |  Info    | Menu audio |  Dual   |
| Return TV   |  TV/R    | Volume-    |  Vol -  |
| Menu video  |  D. Menu | Chan.Down  |  Ch -   |
| Text        |  Text  | 1          |  1  |
| Txt Expand  |  Eject | 2          |  2  |
| TV/AV       |  AV    | 3          |  3  |
| Menu        |  Menu  | 4          |  4  |
| Menu Up     |  Up    | 5          |  5  |
| Menu Left   |  Left  | 6          |  6  |
| OK Enter    |  Ok    | 7          |  7  |



| Original      | Recharge   | Original       | Recharge   |
|---------------|--|----------------|--|
| 8             |  8                | Nicam/Mono     |  Shift + Green  |
| 9             |  9                | Level L        |  Shift + Yellow |
| Guide -/-- 1. |  Guide            | Audio-         |  Shift + Vol -  |
| 0/10          |  0                | Audio+         |  Shift + Vol +  |
| 2.Fav P/C 2.  |  Pre Ch           | Level R/Woofer |  Shift + Blue   |
| Red           |  Red              |                |  |
| Green         |  Green            |                |  |
| Tone-         |  I<<              |                |  |
| Yellow        |  Yellow           |                |  |
| Blue          |  Blue             |                |  |
| Off/Tim       |  Shift + Options |                |  |
| On/Tim        |  Options        |                |  |
| Color+ P.Std  |  Format         |                |  |
| Contrast+     |  Shift + Ch +   |                |  |
| Color- S.Std  |  Shift + Dual   |                |  |
| Contrast-     |  Shift + Ch -   |                |  |
| Surround      |  Shift + Red    |                |  |

