





















 

 













Original	Rechange
 Power	 Power
 V-Mode	 D.Menu / Top
 Mute	 Mute / Dimmer
 SAT	 Shift + 0
 SAT	 Display / Media
 TV / AV	 AV / Input / RDS
 Zoom	 Zoom / Size
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 FAV	 Fav / Marker / PC
 4	 4
 5	 5
 6	 6
 Pause	 Pause / Step / Freeze
 7	 7

Original	Rechange
 8	 8
 9	 9
 Page +	 Shift + CH+ /
 TV / Radio	 TV/Radio /
 0	 0
 PR-	 Back / Return
 Page -	 Shift + CH- /
 Up / PR +	 CH+ / Page+
 Up / PR +	 Up
 Left / Vol -	 Left
 Left / Vol -	 Vol-
 OK / List	 Smart / List
 OK / List	 OK
 Right / Vol +	 Right
 Right / Vol +	 Vol+
 Down / PR -	 CH- / Page-
 Down / PR -	 Down





Original	Menu	Rechange	Menu / Home
Original	Exit	Rechange	Exit / Cancel / Clear
Original	Info	Rechange	Info / Angle
Original	EPG	Rechange	Guide / EPG / --
Original	Red / Find	Rechange	Red / Netflix / Search
Original	Green / V-Format	Rechange	Picture / Format
Original	Green / V-Format	Rechange	Green / APP / Repeat
Original	Yellow / TXT	Rechange	Text / Goto
Original	Yellow / TXT	Rechange	Yellow / YouTube / Repeat
Original	Blue / Audio	Rechange	Audio / Lang I/II
Original	Blue / Audio	Rechange	Blue / Prime Video / Random
Original	Record	Rechange	Rec / Rec Mode
Original	Play	Rechange	Play / Slow
Original	Stop	Rechange	Stop / Hold
Original	Shift	Rechange	Setup / OPT /
Original	<< Fast	Rechange	<< / Tune-
Original	>> Fast	Rechange	>> / Tune+

Original	< Slow	Rechange	I<< / Preset-
Original	> Slow	Rechange	>>I / Preset+

