 


 







 



 



 
 
























Original	Recharge
 Power	 Power
 Source	 AV
 P.Mode	 Format
 S.Mode	 Dual
 Home	 Shift + Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Q.View	 D. Menu
 Info	 Info

Original	Recharge
 Menu	 Menu
 Guide	 Guide
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Back	 Back
 Exit	 Exit
 Vol +	 Vol +
 Vol -	 Vol -
 APP Store	 Media
 Mute	 Mute
 Tool	 Options
 CH +	 Ch +
 CH -	 Ch -
 FAV	 Pre Ch





Original		Recharge		Original		Recharge	
	APP		Smart				
	CH. List		List				
	<<		<<				
	Play		Play				
	>>		>>				
	Stop		Stop				
	Pause		Pause				
	Rec		Rec				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

