

 

 

 
 



 




 
 
 

 
 
 


 
 
 







 






Original	Rechange
 Power	 Power
 Input	 AV
 Home	 Shift + Smart
 YouTube	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 FAV	 Pre Ch
 Mute	 Mute
 Info	 Info

Original	Rechange
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 Q.View	 Options
 Guide	 Guide
 Menu	 Menu
 Return	 Back
 Exit	 Exit
 3D	 3D
 CH.List	 List
 MTS/SAP	 Dual
 CC	 Subt
 Q.Menu	 D. Menu
 OK	 Ok
 Up	 Up
 Down	 Down





Original		Rechange		Original		Rechange	
	Right		Right				
	Left		Left				
	Sleep		Sleep				
	S.Mode		Shift + Dual				
	USB		Media				
	P.Mode		Shift + Format				
	H.Lock		Shift + Stop				
	P.Size		Format				
	Red		Red				
	Play		Play				
	Pause		Pause				
	Green		Green				
	<<		<<				
	Yellow		Yellow				
	>>		>>				
	Blue		Blue				
	Stop		Stop				

