










 


 



 
 
 
 

 
 

 

 
 
 


 


 
Original	Recharge
 Power	 Power
 TV	 Shift + TV/R
 VCR/AUX	 Shift + Options
 Sleep	 Sleep
 Tv/AV	 AV
 Tuner/Band	 TV/R
 DVD/CD	 Pre Ch
 FL	 Shift + Info
 Play Mode-Mix	 Shift + Play
 Repeat	 Text
 Position	 D. Menu
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Original	Recharge
 7	 7
 8	 8
 9	 9
 0	 0
 $\geq 10 / -/-$	 Guide
 Cancel	 Exit
 I<< Skip	 I<<
 Skip >>I	 >>I
 << Slow/Search	 <<
 Slow/Search >>	 >>
 Stop	 Stop
 Pause	 Pause
 Play	 Play
 Top Menu/Direct Navigator	 Media
 Menu/Play List	 Menu
 Display	 Info
 Return	 Back





Original	Recharge
	
Up	Up
	
Down	Down
	
Right	Right
	
Left	Left
	
Enter	Ok
	
Vol+	Vol +
	
Vol-	Vol -
	
Muting	Mute
	
C.S.M.	Options
	
SFC	Subt
	
Subwoofer	List
	
S.SRND	Red
	
Dolby PL	Green
	
C.Focus	Yellow
	
CH Select-Test	Smart
	
F.M Mode Setup	Format
	
Zoom	Eject

Original	Recharge
	
Group	Blue
	
Audio	Dual














Original	Recharge
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 $\geq 10 / -/--$	 $-/--$ Guide
 Tv/AV	 AV
 CH+	 Ch +
 CH-	 Ch -
 Tv Vol+	 Vol +
 Tv Vol-	 Vol -

Original	Recharge





Original	Recharge
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ≥10 / -/--	 GUIDE Guide
 >>	 >>
 <<	 <<
 <<	 <<
 >>	 >>
 Pause	 Pause

Original	Recharge
 Play	 Play
 Stop	 Stop

