



Original	Recharge
 Power	 Power
 TV	 Shift + TV/R
 VCR/AUX	 Shift + Options
 Sleep	 Sleep
 Tv/AV	 AV
 Tuner/Band	 TV/R
 DVD/CD	 Pre Ch
 FL	 Shift + Info
 Play Mode-Mix	 Shift + Play
 Repeat	 Text
 Position	 D. Menu
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Original	Recharge
 7	 7
 8	 8
 9	 9
 0	 0
 ≥10 / -/-	 Guide
 Cancel	 Exit
 I<< Skip	 I<<
 Skip >>I	 >>I
 << Slow/Search	 <<
 Slow/Search >>	 >>
 Stop	 Stop
 Pause	 Pause
 Play	 Play
 Top Menu/Direct Navigator	 Media
 Menu/Play List	 Menu
 Display	 Info
 Return	 Back





	Original	Recharge		Original	Recharge
	Up		Up		Group
	Down		Down		Audio
	Right		Right		Blue
	Left		Left		Dual
	Enter		Ok		
	Vol+		Vol +		
	Vol-		Vol -		
	Muting		Mute		
	C.S.M.		Options		
	SFC		Subt		
	Subwoofer		List		
	S.SRND		Red		
	Dolby PL		Green		
	C.Focus		Yellow		
	CH Select-Test		Smart		
	F.M Mode Setup		Format		
	Zoom		Eject		





	Original	Recharge		Original	Recharge
	Power		Power		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	$\geq 10 / - / -$		GUIDE		
	Tv/AV		AV		
	CH+		Ch +		
	CH-		Ch -		
	Tv Vol+		Vol +		
	Tv Vol-		Vol -		





Original	Recharge	Original	Recharge
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	≥10 / -/--		Guide
	>>		>>
	<<		<<
	<<		<<
	>>		>>
	Pause		Pause
	Play		Play
	Stop		Stop

