
















 



 

 

 

 

 

 











 





 

 

 

 













 


 
 




Original		Rechange		Original		Rechange	
	Power		Power		Vol-		Vol -
	TV		TV/R		Mute		Mute
	VT		Smart		→←		Media
	BTX		Pre Ch		i		Info
	1		1		Guide		Guide
	2		2		Audio		Dual
	3		3		Brightness+		Up
	4		4		Brightness-		Down
	5		5		(+)Color+		Right
	6		6		(+)Color-		Left
	7		7		( O )		Subt
	8		8		[ ]		Text
	9		9		▲ M		Menu
	0		0		▼↔		Ok
	P+		Ch +		▲[≡>]		>>
	P-		Ch -		▼[<-]		<<
	Vol+		Vol +		+ / +		3D





Original		Recharge		Original		Recharge	
	MEM/CM		Rec				
	X Lock		Options				
	-		Format				
	[>≡]		AV				
	[≡◆≡]		Back				
	00:00		Exit				
	? [≡/]		Eject				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

