



 

 



 








 




 







 


 







 


















 

 

 





Original		Rechange		Original		Rechange	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		OK		OK
	1		1		Right		Right
	2		2		Guide		Guide / EPG / -/-
	3		3		Down		Down
	4		4		TV / Radio		TV/Radio /
	5		5		Red		Red / Netflix / Search
	6		6		Enregistrer		Rec / Rec Mode
	7		7		Green		Green / APP / Repeat
	8		8		FAV		Fav / Marker / PC
	9		9		Yellow		Yellow / YouTube / Repeat
	Info		Info / Angle		Stop		Stop / Hold
	0		0		Blue		Blue / Prime Video / Random
	Recall		Back / Return		Lecteur Media		Display / Media
	Menu		Menu / Home		I<<		I<< / Preset-
	Up		Up		Play		Play / Slow
	Quitter		Exit / Cancel / Clear		<<		<< / Tune-





Original	Rechange	Original	Rechange
Timer	Sleep / Timer		
>>I	>>I / Preset+		
Pause	Pause / Step / Freeze		
>>	>> / Tune+		
TTX	Text / Goto		
Audio	Audio / Lang I/II		
S-Titres	Subtitle / EQ		
Resolution	Picture / Format		

