



Original	Rechange
 Standby	 Power
 DTV/VCR	 Smart
 Mute	 Mute
 Menu	 Menu
 Info	 Info
 EPG	 Guide
 Pause	 Pause
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -

Original	Rechange
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Favorite	 Pre Ch
 Game	 Media
 Recall	 Back
 Tv/Radio	 TV/R
 Audio	 Dual
 Subtitle	 Subt
 Text	 Text





Original	Rechange	Original	Rechange
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

