



Original		Rechange		Original		Rechange	
	Power		Power		Info		Info / Angle
	Mute		Mute / Dimmer		EPG		Guide / EPG / -/-
	1		1		Up		Up
	2		2		Left		Left
	3		3		OK		OK
	4		4		Right		Right
	5		5		Down		Down
	6		6		Menu		Menu / Home
	7		7		Exit		Exit / Cancel / Clear
	8		8		Vol +		Vol+
	9		9		Vol -		Vol-
	0		0		P +		Shift + CH+ /
	TV / R		TV/Radio /		List		Smart / List
	Home		D.Menu / Top		P -		Shift + CH- /
	FAV		Fav / Marker / PC		CH +		CH+ / Page+
	Back		Back / Return		USB		Shift + 8
	Audio		Audio / Lang I/II		Text		Text / Goto





Original		Recharge		Original	Recharge
	CH -		CH- / Page-		
	SUB		Subtitle / EQ		
	Aspect		Picture / Format		
	Pause		Pause / Step / Freeze		
	<<		<< / Tune-		
	>>		>> / Tune+		
	Rec		Rec / Rec Mode		
	Play		Play / Slow		
	I<<		I<< / Preset-		
	>>I		>>I / Preset+		
	Stop		Stop / Hold		
	Red		Red / Netflix / Search		
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		

