


 

 






 



 

 







 

 






 
 




 


 
 

 





 





Original		Rechange		Original		Rechange	
	Power		Power		List / Goto		List
	Mute		Mute		Menu		Menu
	Sleep		Sleep		Source		AV
	P.Mode		Shift + Format		Aspect		Format
	S.Mode		Dual		Recall		Back
	Rec		Rec		Info		Info
	DTV		Smart		Up		Up
	1		1		Left		Left
	2		2		OK		Ok
	3		3		Right		Right
	4		4		Down		Down
	5		5		CH -		Ch -
	6		6		CH +		Ch +
	7		7		Vol -		Vol -
	8		8		Vol +		Vol +
	9		9		Audio		Shift + Dual
	0		0		FAV / Title		Pre Ch





Original	Rechange
 Exit	 Exit
 EPG / Display	 Guide
 EPG / Display	 Shift + Info
 Index / I<<	 I<<
 Hold / >>I	 >>I
 Cancel / <<	 <<
 Size / >>	 >>
 TTX / A-B	 Text
 Mix / Play/Pause	 Eject
 Mix / Play/Pause	 Play
 Mix / Play/Pause	 Pause
 Subpage / Stop	 Stop
 Subpage / Stop	 Shift + Subt
 Subtitle	 Subt
 Reveal / Eject	 Shift + Exit
 Freeze / Repeat	 Shift + Pause
 TV/Radio / Setup	 Options

Original	Rechange
 Freeze / Repeat	 Shift + Text
 TV/Radio / Setup	 TV/R
 Rec Menu /	 Shift + Menu
 Rec Menu /	 D. Menu
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

