



Original		Rechange		Original		Rechange	
	Power		Power		Display		Info
	Mute		Mute		CH +		Ch +
	1		1		CH -		Ch -
	2		2		Up		Up
	3		3		Left		Left
	4		4		Enter		Ok
	5		5		Right		Right
	6		6		Down		Down
	7		7		LCD Menu		Menu
	8		8		Exit		Exit
	9		9		Input		AV
	0		0		PMode		Shift + Format
	-/-		Guide		SMode		Shift + Dual
	Recall		Back		Sleep		Sleep
	Vol +		Vol +		Fav		Pre Ch
	Vol -		Vol -		Fav -		Shift + Down
	Nicam		Smart		Fav +		Shift + Up





	Original	Rechange
	Aspect	Format
	Play/Pause / Text	Play
	Play/Pause / Text	Pause
	Play/Pause / Text	Text
	Stop / Hold	Stop
	Lang	Dual
	Subtitle	Subt
	>> / Index	>>
	<< / Size	<<
	>>I / Reveal	>>I
	I<< / Subpage	I<<
	Red	Red
	Green	Green
	Yellow	Yellow
	Blue	Blue

Original	Rechange

