



Original	Recharge
 POWER	 Power
 TV	 TV/R
 VCR / AUX	 Shift + TV/R
 SLEEP	 Sleep
 TV / AV	 AV
 TUNER / BAND	 Smart
 DVD / CD	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Recharge
 $\geq 10$ / -/--	 Guide
 Cancel	 Exit
 CH +	 Ch +
 CH -	 Ch -
 VOL +	 Vol +
 VOL -	 Vol -
 SKIP PREV.	 I<<
 SKIP NEXT	 >>I
 SLOW/SEARCH	 <<
 SLOW/SEARCH	 >>
 STOP	 Stop
 PAUSE	 Pause
 PLAY	 Play
 TOP MENU / DIR. NAV.	 D. Menu
 MENU / PLAY LIST	 Menu
 UP	 Up
 LEFT	 Left













 


 

 

 

 




 















Original	Recharge
ENTER	Ok
RIGHT	Right
DOWN	Down
DISPLAY / TV VOL-	Info
DISPLAY / TV VOL-	Shift + Vol -
RETURN / TV	Shift + Vol +
RETURN / TV	Back
SUBWOOFER	3D
SFC	Green
C. FOCUS	Shift + 1
SUPER SRND.	Format
DOLBY PL. II	Dual
Mix 2CH	Shift + Subt
C. S. M.	Red
POSITION	Pre Ch
AUDIO	Shift + Dual
ZOOM	Eject

Original	Recharge
SETUP	Options
MUTING	Mute
FL DISPLAY	Shift + Info
PAGE	Shift + 2
GROUP	Shift + 3
REPEAT	Text
PLAY MODE	Shift + Play
TEST	Yellow
CH. SELECT	List
QUICK REPLAY	Blue
SUBTITLE	Subt












 














 

 
 
 

 
 
 
 





 


Original	Recharge	Original	Recharge
 Power	 Power	 Tv Vol-	 Vol -
 Power AV	 Shift + Power		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 $\geq 10$ / -/-	 GUIDE		
 TV/AV	 AV		
 CH+	 Ch +		
 CH-	 Ch -		
 Tv Vol+	 Vol +		

Original	Recharge
 Tv Vol-	 Vol -





Original	Recharge
 Power	 Power
 Power AV	 Shift + Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 $\geq 10$ / -/--	 GUIDE Guide
 SKIP $\gg $	 $\gg $
 SKIP $ <<$	 $ <<$
 SLOW SE $<<$	 $<<$
 SEARCH $\gg$	 $\gg$

Original	Recharge
 Pause	 Pause
 Play	 Play
 Stop	 Stop

