


Original	Recharge	Original	Recharge
 Power	 Power	 DVD / CD	 Media
 Mute	 Mute	 Vol +	 Vol +
 Menu	 Menu	 Vol -	 Vol -
 1 / Disc 1	 1	 >>	 >>
 2 / Disc 2	 2	 <<	 <<
 3 / Disc 3	 3	 Up	 Up
 4 / Disc 4	 4	 Right	 Right
 5 / Disc 5	 5	 Down	 Down
 6	 6	 Left	 Left
 7 / Angle	 7	 OK / Save	 Ok
 8	 8	 Return	 Back
 9 / Night DVD	 9	 Clear / Sleep	 Sleep
 0 / --	 0	 Play Mode	 Shift + Play
 Aux 1 / SAT /	 AV	 Pause	 Pause
 Aux 2 / VCR	 Shift + AV	 Stop	 Stop
 Tuner	 Shift + TV/R	 Rec / Zoom	 Rec
 TV	 TV/R	 << REV	 <<

Original	Recharge	Original	Recharge
 DVD / CD	 Media	 Up	 Up
 Vol +	 Vol +	 Right	 Right
 Vol -	 Vol -	 Down	 Down
 >>	 >>	 Left	 Left
 <<	 <<	 OK / Save	 Ok
 Up	 Up	 Return	 Back
 Right	 Right	 Clear / Sleep	 Sleep
 Down	 Down	 Play Mode	 Shift + Play
 Left	 Left	 Pause	 Pause
 OK / Save	 Ok	 Stop	 Stop
 Return	 Back	 Rec / Zoom	 Rec
 Clear / Sleep	 Sleep	 << REV	 <<
 Play Mode	 Shift + Play		
 Pause	 Pause		
 Stop	 Stop		
 Rec / Zoom	 Rec		
 << REV	 <<		

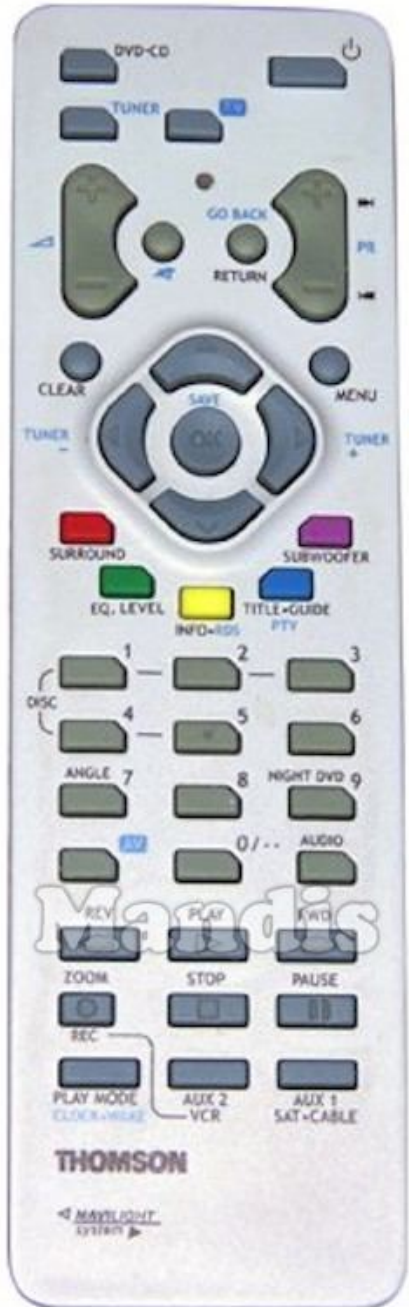



	Original	Rechange	Original	Rechange
	Play			
	>> FWD			
	Audio			
	PR +			
	PR -			
	Tuner -			
	Tuner +			
	Purple /			
	Red / Surround			
	Green / EQ Level			
	Yellow / Info			
	Blue / Title/Guide			
	Yellow / Info			
	Blue / Title/Guide			

