 



 



 

 
 
 
 

 





 



 


 










 
 






 






 
 
 

 





 

 





Original		Rechange		Original		Rechange	
	Power		Power		Vol+		Vol +
	Sleep		Sleep		Vol-		Vol -
	CBL/Sat		1		Mute		Mute
	Media Player		2		Info		Info
	Blu-ray/DVD		3		Option		Options
	Game		4		Back		Back
	AUX		5		Setup		Menu
	Tuner		6		Up		Up
	iPod/USB		7		Down		Down
	Tv Audio		8		Right		Right
	CD		9		Left		Left
	Online Music		Guide		Enter		Ok
	Bluetooth		0		I<</Tune-		I<<
	Internet Radio		Pre Ch		Play		Play
	CH/Page+		Ch +		Pause		Pause
	CH/Page-		Ch -		>>I/Tune+		>>I
	Eco		3D		Smart Select 1		D. Menu





Original	Recharge	Original	Recharge
SMART 2 Smart Select 2	REPEAT TEXT Text		
SELECT 3 Smart Select 3	ZOOM Eject		
4 Smart Select 4	TIMER AV		
MOVIE Green/Movie	B Green		
SOUND MUSIC Red/Music	A Red		
MODE GAME Blue/Game	D Blue		
PURE Yellow/Pure	C Yellow		

