











 





























 



 



 



 



 



 





 



 
 


 





Original		Rechange		Original		Rechange	
	On		Power		SP A/B		Sound / Title
	Standby		Shift + Power		Up		Up
	V1		1		Muting		Mute / Dimmer
	V2		4		Left		Left
	V3		7		Enter		OK
	Multi CH		8		Right		Right
	DVD		2		Return		Back / Return
	Tape		5		Down		Down
	Tuner		6		Setup		Setup / OPT /
	CD		3		Pause		Pause / Step / Freeze
	Tuner/Dimmer		0		Play		Play / Slow
	Tuner/Dimmer		Shift + Mute / Dimmer		Stop		Stop / Hold
	Sleep		Sleep / Timer		<<		<< / Tune-
	CH/Disc+		CH+ / Page+		>>		>> / Tune+
	Vol+		Vol+		I<<		I<< / Preset-
	CH/Disc-		CH- / Page-		>>I		>>I / Preset+
	Vol-		Vol-		Stereo		Red / Netflix / Search







 



 












 














 



 







 



 



 








 




Original		Rechange		Original		Rechange	
	Surround		Eject / Surround				
	Surround		Green / APP / Repeat				
	<		Yellow / YouTube / Repeat				
	>		Blue / Prime Video / Random				
	Test Tone		Text / Goto				
	CH Sel		Smart / List				
	Level-		Shift + CH- /				
	Level+		Shift + CH+ /				
	Display		Display / Media				
	L.Night/HDD		D.Menu / Top				
	Cine FLTR/DVD		Menu / Home				





Original		Rechange		Original		Rechange	
	On		Power		Up		Up
	Standby		Shift + Power		Muting/Previous Menu		Menu / Home
	1		1		Muting/Previous Menu		Mute / Dimmer
	2		2		Left		Left
	3		3		Enter		OK
	4		4		Right		Right
	5		5		Return		Back / Return
	6		6		Down		Down
	7		7		Setup		Setup / OPT /
	8		8		Pause		Pause / Step / Freeze
	9		9		Play		Play / Slow
	+10		Guide / EPG / -/--		Stop		Stop / Hold
	0		0		<<		<< / Tune-
	CLR		Exit / Cancel / Clear		>>		>> / Tune+
	CH/Disc+		CH+ / Page+		I<<		I<< / Preset-
	CH/Disc-		CH- / Page-		>>I		>>I / Preset+
	Top Menu		D.Menu / Top		Audio		Audio / Lang I/II







	Original	Rechange	Original	Rechange
	Subtitle	 Subtitle / EQ		
	Random	 Blue / Prime Video / Random		
	Repeat	 Green / APP / Repeat		
	Display	 Display / Media		





Original	Rechange
 On	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 CH/Disc+	 CH+ / Page+
 CH/Disc-	 CH- / Page-
 Guide	 Guide / EPG / -/--
 Up	 Up
 Muting/Previous Menu	 Menu / Home
 Muting/Previous Menu	 Mute / Dimmer

Original	Rechange
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Setup	 Setup / OPT /
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 On CD	 Shift + Power
 Standby CD	 Shift + Mute / Dimmer
 1 CD	 Shift + 1
 2 CD	 Shift + 2
 3 CD	 Shift + 3
 4 CD	 Shift + 4
 5 CD	 Shift + 5





Original	Recharge
6 CD	Shift + 6
7 CD	Shift + 7
8 CD	Shift + 8
9 CD	Shift + 9
+10 CD	Shift + Guide / EPG / -/-
0 CD	Shift + 0
CLR CD	Shift + Exit / Cancel / Clear
CH/Disc + CD	Shift + CH+ /
CH/Disc- CD	Shift + CH- /
Pause CD	Shift + Pause / Step /
Play CD	Shift + Play /
Stop CD	Shift + Stop /
<< CD	Shift + << /
>> CD	Shift + >> /
I<< CD	Shift + I<< / Preset-
>>I CD	Shift + >>I / Preset+
Random CD	Shift + Blue / Prime Video / Random

Original	Recharge
Repeat CD	Shift + Green / APP /
Display CD	Shift + Display / Media





Original	Rechange
On	Power
Standby	Shift + Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
CH+	CH+ / Page+
CH-	CH- / Page-
Up	Up
Left	Left
Enter	OK

Original	Rechange
Right	Right
Down	Down
Setup	Setup / OPT /
Pause	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
<<	<< / Tune-
>>	>> / Tune+

