



 
 
 
 
 


 

 
 







 
 


 



 
 


 
 
 

 
 
 

 

 
 


 

 



 








 








Original	Rechange	Original	Rechange
 Power	 Power	 Blue	 Blue
 PREMIUM NET	 Smart	 Back	 Back
 Guida	 Guide	 Exit / Stop	 Exit
 Menu	 Menu	 Exit / Stop	 Stop
 Info	 Info	 << REW	 <<
 Vol +	 Vol +	 >> FWD	 >>
 Vol -	 Vol -	 Pause / Play	 Play
 P +	 Ch +	 Pause / Play	 Pause
 P -	 Ch -	 1	 1
 Up	 Up	 2	 2
 Left	 Left	 3	 3
 OK	 Ok	 4	 4
 Right	 Right	 5	 5
 Down	 Down	 6	 6
 Red	 Red	 7	 7
 Green	 Green	 8	 8
 Yellow	 Yellow	 9	 9





Original	Rechange
0	0
Lista	List
Opzioni	Options
Text	Text
TV / Rad	TV/R
APP	Shift + Media
Source	AV
I<< Prev	I<<
Rec	Rec
File	Media
>>I Next	>>I

Original	Rechange

