 





 
 



 








 




Original	Recharge
 On	 Power
 Off	 Shift + Power
 CD	 3
 MP	 8
 Tuner	 6
 Discphono	 1
 Tape 1	 2
 Tape 2	 5
 AUX	 7
 Video	 4
 Info	 Info / Angle
 Sleep	 Sleep / Timer
 Scan Tune >>	 >> / Tune+
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 << Scan Tune	 << / Tune-
 DIM	 Shift + Mute / Dimmer

Original	Recharge
 Vol-	 Vol-
 SPK A/CD	 CH+ / Page+
 Up	 Up
 SPK B/USB	 CH- / Page-
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Tone DFT/OPT	 Setup / OPT /
 I<< Preset	 I<< / Preset-
 Play/AM/FM/DB	 Play / Slow
 Preset >>I	 >>I / Preset+
 Red/Rand/Tuner	 Red / Netflix / Search
 Green/RPT/Blen	 Green / APP / Repeat
 Yellow/Prog/Memo	 Yellow / YouTube / Repeat
 Blue/Clear/Delete	 Blue / Prime Video / Random






 
 


 
 




Original	Recharge	Original	Recharge
	On		Power
	Off		Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Disp		Display / Media
	0		0
	+10		Guide / EPG / -/-
	>>		>> / Tune+
	Mute		Mute / Dimmer
	Vol+		Vol+
	<<		<< / Tune-
	DIM		Shift + Mute / Dimmer
	Vol-		Vol-
	SPK A / CD		CH+ / Page+
	Up		Up
	SPK B / USB		CH- / Page-
	Left		Left
	Enter		OK
	Right		Right
	Menu / SRC		D.Menu / Top
	Down		Down
	Tone DFT / OPT		Setup / OPT /
	Open/Close/Autot		Eject / Surround
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	I<<		I<< / Preset-
	Play		Play / Slow






 


Original	Recharge	Original	Recharge
 On	 Power	 >>	 >>  / Preset+
 Off	 Shift + Power	 Red/Rand/Tuner	 Red / Netflix / Search
 Disp/Info	 Info / Angle	 Green/RPT/Blen	 Green / APP / Repeat
 Mute	 Mute / Dimmer		
 Vol+	 Vol+		
 DIM	 Shift + Mute / Dimmer		
 Vol-	 Vol-		
 Up	 Up		
 Left	 Left		
 Enter	 OK		
 Right	 Right		
 Menu/SRC	 Menu / Home		
 Down	 Down		
 Stop	 Stop / Hold		
 Pause	 Pause / Step / Freeze		
 I<<	 I<< / Preset-		
 Play	 Play / Slow		





Original	Recharge
 On	 Power
 Off	 Shift + Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Disp/Info	 Info / Angle
 0	 0
 Tune Scan >>	 >> / Tune+
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 << Scan Tune	 << / Tune-

Original	Recharge
 Vol-	 Vol-
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 I<< Preset	 I<< / Preset-
 Play/AM/FM/DB	 Play / Slow
 Preset >>I	 >>I / Preset+
 Red/Rand/Tuner	 Red / Netflix / Search
 Green/RPT/Blen	 Green / APP / Repeat
 Yellow/Prog/Memo	 Yellow / YouTube / Repeat
 Blue/Clear/Delete	 Blue / Prime Video / Random

