

 





 

 

 
 


 

 

 

 

 



 

 







 







Original	Rechange
 Open/Close	 Eject / Surround
 DVD	 Shift + 2
 Video	 Shift + 4
 Power	 Power
 1	 1
 2	 2
 3	 3
 Prog / Tracking +	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 Prog / Tracking -	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Input	 AV / Input / RDS
 Angle	 Info / Angle

Original	Rechange
 0	 0
 Set	 Setup / OPT /
 TV / Video	 TV/Radio /
 Top Menu	 D.Menu / Top
 Menu	 Menu / Home
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 System Menu	 Shift + D.Menu / Top Menu
 Title List	 Sound / Title
 Timer	 Sleep / Timer
 Display	 Display / Media
 Up	 Up
 Original / Playlists	 Smart / List
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return





Original	Recharge
	 Down
	 Shift + Setup / OPT / Tools
	 I<< / Preset-
	 Shift + Left
	 Shift + Right
	 >>I / Preset+
	 << / Tune-
	 Play / Slow
	 I> / >>
	 Exit / Cancel / Clear
	 Pause / Step / Freeze
	 Stop / Hold
	 Rec / Rec Mode
	 Fav / Marker / PC
	 Shift + Rec / Rec Mode
	 Vol+
	 Shift + CH+ /

Original	Recharge
	 Shift + Power
	 Vol-
	 Shift + CH- /
	 Shift + AV / Input / RDS





Original	Rechange
Open/Close	Eject / Surround
DVD	Shift + 2
Video	Shift + 4
Power	Power
1	1
2	2
3	3
Prog+	CH+ / Page+
4	4
5	5
6	6
Prog-	CH- / Page-
7	7
8	8
9	9
Input Select	AV / Input / RDS
Angle	Info / Angle

Original	Rechange
0	0
Set	Text / Goto
Tv/Video	TV/Radio /
Top Menu	D.Menu / Top
Menu	Menu / Home
O))	Audio / Lang I/II
[...]	Subtitle / EQ
System Menu	Smart / List
Title List	Sound / Title
Timer	Sleep / Timer
Display	Display / Media
Up	Up
Original / Playlist	Shift + Smart / List
Left	Left
Enter	OK
Right	Right
Return	Back / Return







 





 

 

 



 

 

 

 
 
 



 

 



Original	Recharge
Down	Down
Tools	Setup / OPT /
I<<	I<< / Preset-
←	Shift + Left
→	Shift + Right
>>I	>>I / Preset+
<<<	<<< / Tune-
Play	Play / Slow
>>>	>>> / Tune+
-/--/Clear	Exit / Cancel / Clear
-/--/Clear	Guide / EPG / -/--
Pause	Pause / Step / Freeze
Stop	Stop / Hold
Rec	Rec / Rec Mode
Synchro Rec	Picture / Format
Rec Mode	Shift + Rec / Rec Mode
Vol+	Vol+

Original	Recharge
Vol-	Vol-







Original	Rechange
 Open/Close	 Eject / Surround
 DVD	 Shift + 2
 Video	 Shift + 4
 Power	 Power
 1	 1
 2	 2
 3	 3
 Prog+	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 Prog-	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Input Select	 AV / Input / RDS
 Angle	 Info / Angle

Original	Rechange
 0	 0
 Set	 Text / Goto
 Tv/Video	 TV/Radio /
 Top Menu	 D.Menu / Top
 Menu	 Menu / Home
 O))	 Audio / Lang I/II
 [...]	 Subtitle / EQ
 System Menu	 Smart / List
 Title List	 Sound / Title
 Timer	 Sleep / Timer
 Display	 Display / Media
 Up	 Up
 Original / Playlist	 Shift + Smart / List
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return





Original	Recharge
 Down	 Down
 Tools	 Setup / OPT /
 I<<	 I<< / Preset-
 ←	 Shift + Left
 →	 Shift + Right
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 -/-/Clear	 Exit / Cancel / Clear
 -/-/Clear	 Guide / EPG / -/-
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 Synchro Rec	 Picture / Format
 Rec Mode	 Shift + Rec / Rec Mode
 Vol+	 Vol+

Original	Recharge
 Vol-	 Vol-

