



Original	Rechange
 Power	 Power
 TV / AV	 AV / Input / RDS
 TV / TXT	 Text / Goto
 Cancel	 Shift + Exit / Cancel / Clear
 Reveal	 Display / Media
 DTV	 Setup / OPT /
 Hold	 Stop / Hold
 Size	 Zoom / Size
 Subpage	 Eject / Surround
 Index	 D.Menu / Top
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 CH +	 CH+ / Page+
 Menu	 Menu / Home
 Vol +	 Vol+

Original	Rechange
 CH -	 CH- / Page-
 Exit	 Exit / Cancel / Clear
 Vol -	 Vol-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9





Original		Recharge		Original		Recharge	
	FAV		Fav / Marker / PC				
	0		0				
	Recall		Back / Return				
	Picture		Picture / Format				
	Sound		Sound / Title				
	Nicam / A2		Audio / Lang I/II				
	Mute		Mute / Dimmer				
	Sleep		Sleep / Timer				
	Info		Info / Angle				
	Subtitle		Subtitle / EQ				
	Channel List		Smart / List				
	EPG		Guide / EPG / -/-				
	TV / Radio		TV/Radio /				

